


Put Ceramic on Walls or Floors in Elevation Mode

1 of 5

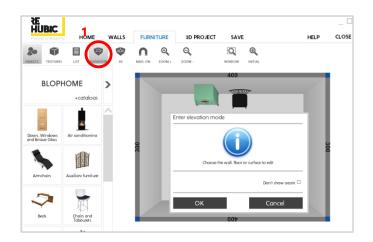

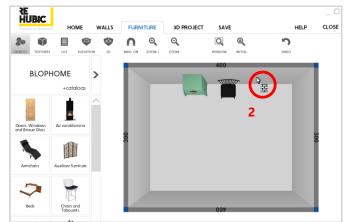

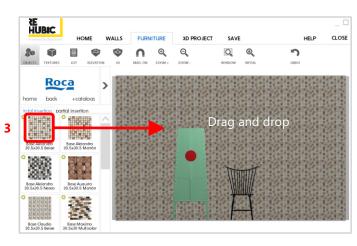



1. Select Elevation


2. Select wall

3. Cover

3. Cover

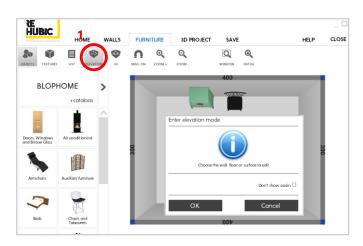

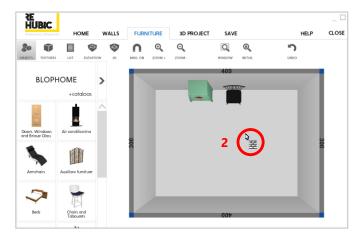

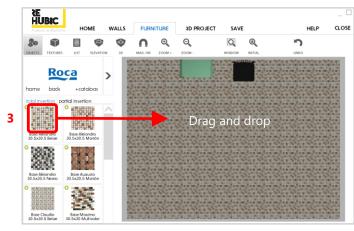



1. Select Elevation 2. Select floor


Put Ceramic on Walls or Floors in Elevation Mode


2 of 5


#### What can I do? Window

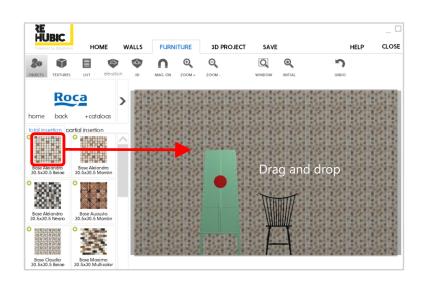

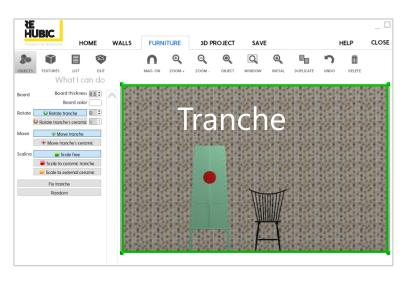

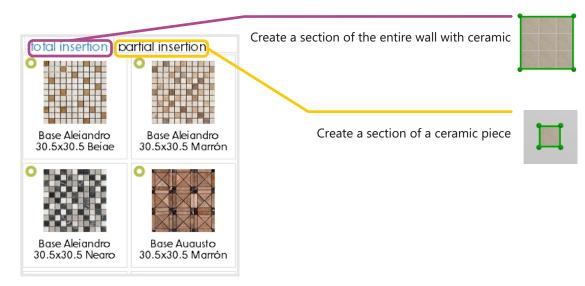

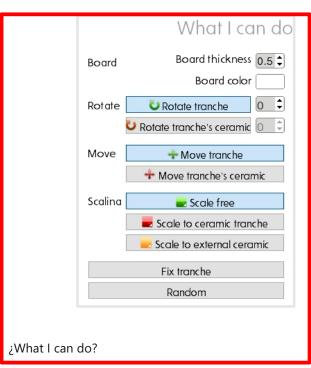

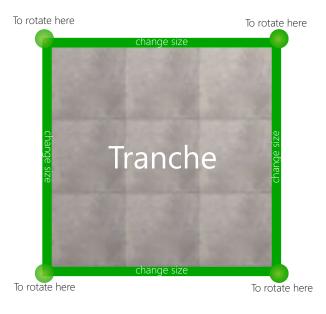


Put Ceramic on Walls or Floors in Elevation Mode

3 of 5


#### What can I do? Window


## **Change thickness of the board**



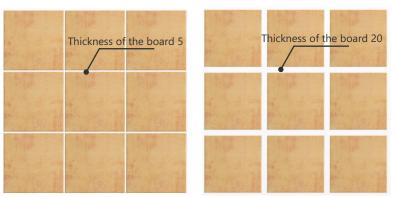



## **Change color of board**

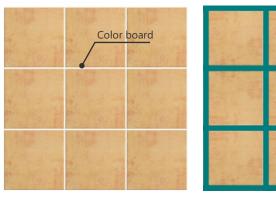

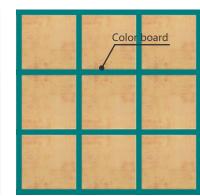


#### **Rotate tranche**

 

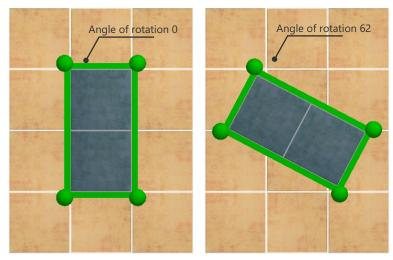

### **Ceramic tiles rotate the tranche**

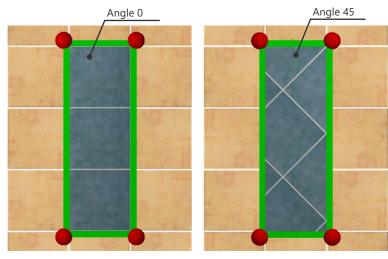



Put Ceramic on Walls or Floors in Elevation Mode

4 of 5


#### What can I do? Window



 

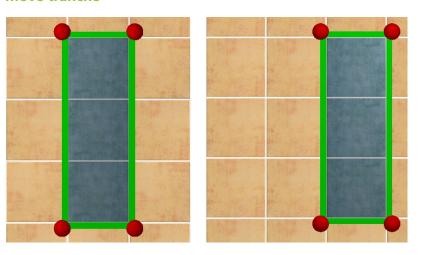

### Move ceramic tiles the tranche

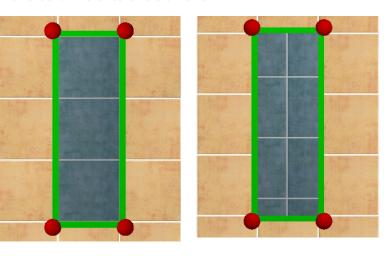







Put Ceramic on Walls or Floors in Elevation Mode


5 of 5

#### What can I do? Window

 
### **Scale free**




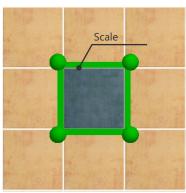

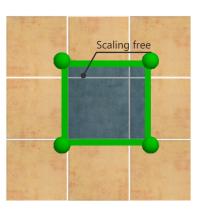



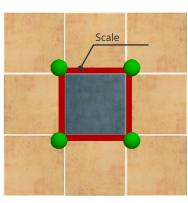

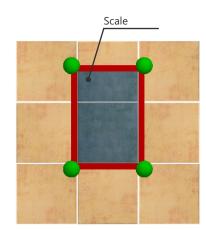

### **Scale to external ceramic**

